




VIDEO TUTORIAL:




INSTALLATION VIDEO:

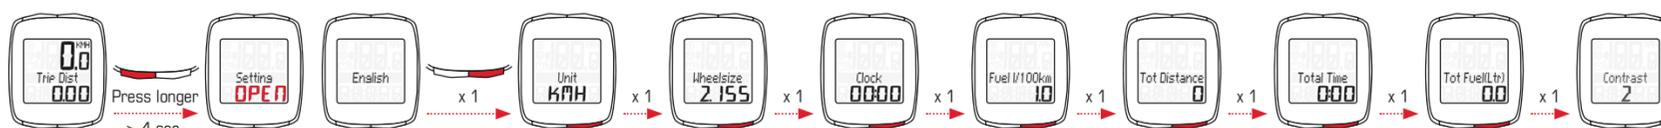


Set language / Sprache einstellen / Sélectionner la langue / Selezione lingua / Seleccionar idioma / Taalkeuze / Wybór języka

English → Deutsch

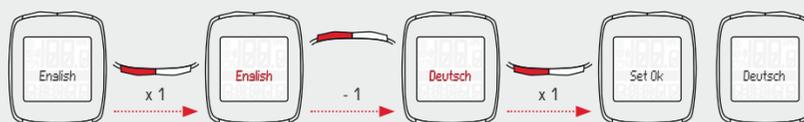

Set unit / Einheit festlegen / Définir l'unité / Impostazione unità / Determinar unidad / Eenheid vastleggen / Ustalenie jednostki

KMH → MPH

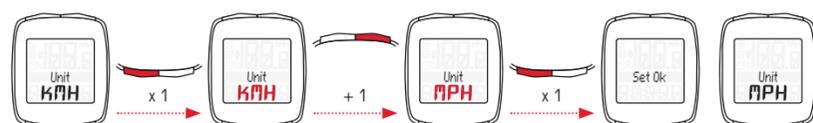


Set wheel size / Eingabe Radumfang / Réglage de la circonférence de la roue / Immissione circonferenza ruota / Introducción de las dimensiones de la rueda / Invoer wielomtrek / Zadání obvodu kola

2155 → 2136




Set clock / Uhrzeit einstellen / Régler l'heure / Impostazione orario / Ajustar hora / Kloktijd instellen / Ustawienie czasu

00:00 → 15:36

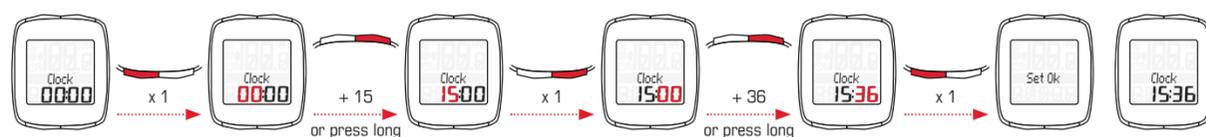

Set fuel I/100 km / Fuel I/100 km einstellen / Français / Italienisch / Spanisch / Niederländisch / Polnisch

1,0 → 7,6

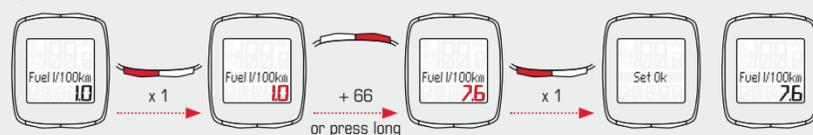

Set total distance / Gesamtstrecke einstellen / Régler la distance totale / Impostazione percorso totale / Ajustar tramos totales / Totale afstand instellen / Ustawienie całkowitej długości dystansu

0 → 2.325




Set total time / Gesamtzeit einstellen / Régler la durée totale / Impostazione tempo totale / Ajustar tiempo total / Totale tijd instellen / Ustawienie czasu całkowitego

0:00 → 105:40




Set total fuel / Total Fuel einstellen / Français / Italienisch / Spanisch / Niederländisch / Polnisch

0,0 → 120,3

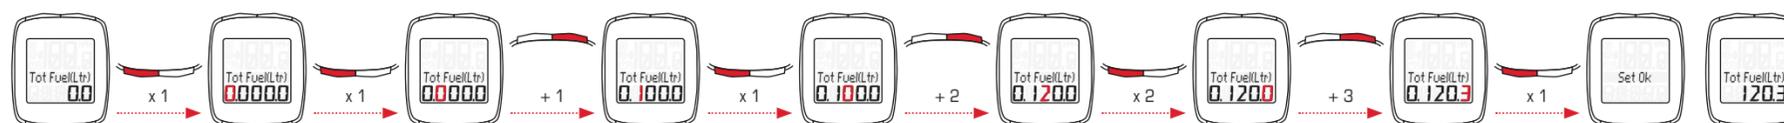


Set contrast / Kontrast einstellen / Français / Italienisch / Spanisch / Niederländisch / Polnisch


2 → 3

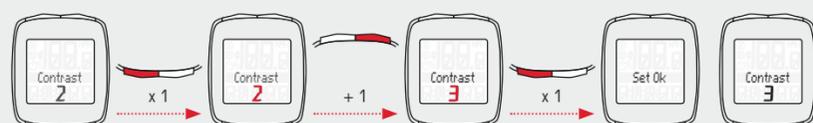

Setting menu / Einstellungs Menü / Menu réglages / Menu impostazioni / Menú de ajuste / Instellingsmenu / Menu ustawień

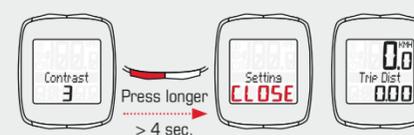

Reset / Nullstellen / Réinitialiser / Azzeramento / Colocar en cero / Op nul instellen / Zerowanie

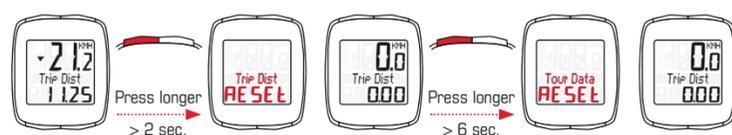

Trip Section Counter (TS) / Trip Section Counter (TS) / Français / Italienisch / Spanisch / Niederländisch / Polnisch

Start / Stop



1. INSTALLATION OF THE BRACKET

1.1 Stem or handlebar?

1.3 → **1.4** → **1.5** **1.2** → **1.3** → **1.4** → **1.5**

1.2 Change handlebar → Stem

→ The mounting bracket included in the package is intended for handlebar mounting. For assembly on the stem release the 4 screws on the back, turn the plate by 90° and secure again.

A 4 x **B** 4 x

90°

1.3 Installation of the bracket

→ Remove the yellow foil

1.4

? oder or ou

1.5 A

? oder or ou

1.5 B

? oder or ou

1.6 Installation of the computer on the mounting bracket

CLICK

1.6 Installation of the computer on the mounting bracket

CLICK

2. INSTALLATION OF THE WIRED SENSOR AND STANDARD MAGNET

2.1

2.2 Installation of the wired sensor

? oder or ou

2.3 Installation of the standard magnet

? oder or ou

CLICK

2.4 Adjusting of standard magnet

Max. 5 mm

3. INSTALLATION OF THE WIRELESS SPEED TRANSMITTER

3.1 BC 12.12 STS

? oder or ou

3.2 Transmission range of STS speed transmitter

Max. 30°
Max. 90 cm

3.3 Installation of the power magnet

? oder or ou

3.4 Adjusting of power magnet

Max. 12 mm

→ In order to achieve the necessary 12 mm or less install the transmitter and the magnet closer to the wheel hub.

4. BATTERY CHANGE

4.1 Change battery / Bike Computer

4.2 Change battery / Speed transmitter

→ Before replacing a new battery, wait for 1 minute

5. WHEEL SIZE CHART

5.1 Wheel Size Chart

? oder or ou

mm x 3,14

km/h:
WS = mm x 3,14
mph:
WS = mm x 3,14

1x

km/h:
WS = mm
mph:
WS = mm

= WS (mm)

ETRTO		ETRTO	
16 x 1,75 x 2	kmh mph	16 x 1,75 x 2	kmh mph
47-305	16 x 1.90	1272	32-622
47-406	20 x 1.75	1590	35-622
37-540	24 x 1.75	1948	37-622
47-507	24 x 1.75	1900	37-622
37-584	26 x 1 3/8, 650 STD	2086	40-622
37-590	26 x 1 3/8, 650 x 35A	2100	42-622
40-559	26 x 1.50	2030	47-622
42-559	26 x 1.60	2025	50-622
47-559	26 x 1.75	2050	54-622
50-559	26 x 2.00	2075	57-622
54-559	26 x 2.10	2100	60-622
57-559	26 x 2.25	2120	650 x 23C
57-584	27 1/2 x 2.25	2128	700 x 18C
28-630	27 x 1 1/4	2174	20-622
32-630	27 x 1 1/4	2220	23-622
40-635	28 x 1 1/2	2265	25-622
			28-622
			28 x 1.25, 700 x 32C
			28 x 1.35, 700 x 35C
			28 x 1.40, 700 x 35C
			28 x 1.40, 700 x 37C
			28 x 1.50, 700 x 38C
			28 x 1.60, 700 x 40C
			28 x 1.75
			29 x 2.00
			29 x 2.10
			29 x 2.25
			29 x 2.35
			650 x 23C
			700 x 18C
			700 x 20C
			700 x 23C
			700 x 25C
			700 x 28C
			2170
			2185
			2200
			2200
			2220
			2230
			2250
			2280
			2295
			2288
			2330
			1973
			2102
			2100
			2125
			2135
			2150

6. PACKAGING CONTENT

Wired

Wireless