




# Mobile PowerPack 5200 mAh


# User's Guide

GB

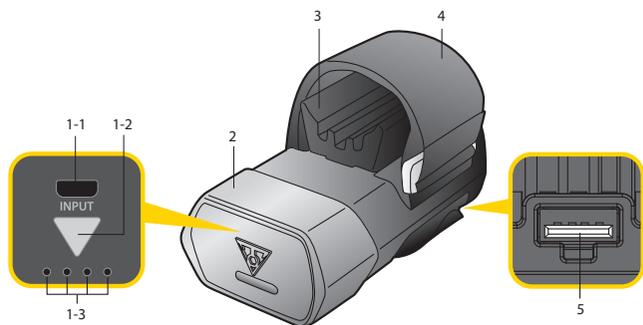


Works with electronic devices with Micro USB port or any others (using your original charging cables).

## CAPACITY INSTRUCTION

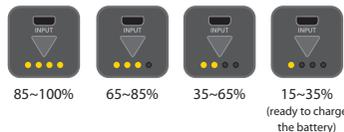


- 1-1 Micro USB Input Socket
- 1-2 Indicator/ Power Button
  - for checking battery power level.
  - for turning on PowerPack to charge your mobile phone.
- 1-3 Power Indicator
- 2. Rubber Cover
- 3. Rubber Pad
- 4. Hook-and-Loop Fastener
- 5. USB Output Socket
- 6. USB - Micro USB Cable
  - for charging PowerPack via any USB port (input socket)

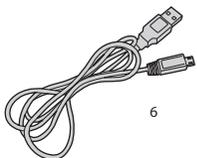

Allows recharging of PowerPack from your computer or charging smartphones with Micro USB port.

- 7. Wire Collector
  - This Mobile PowerPack does not include a Lightning charge cable for iPhone 5 or proprietary charging cables for other mobile phones.
  - Use your original charging cable and fasten the cable securely with supplied fastening strap.
  - Make sure the charging cable and fastening strap do not restrict turning movement of handlebar or stem.

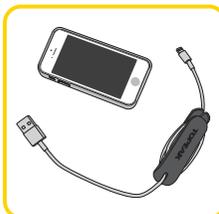

## INSTALLATION

1. Install the Hook-and-Loop Fastener as shown.
2. Fasten the strap and install PowerPack underneath of the Stem.


3. Press Indicator/ Power button before charging your mobile phone.
 

Although Mobile PowerPack is water-resistant (under normal weather conditions of rain, etc.), never connect to smartphone when it's raining.

Connect your smartphone with USB Cable and make sure the Rubber Cover is installed properly before use.

## MOUNTING POSITION



1. Underneath Stem (Recommended)
2. Underneath Top Tube
3. Underneath Handlebar

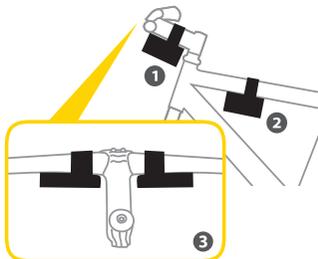

## SPECIFICATION

Battery: 5200 mAh Li-ion  
 Burn Time (approx): charge iPhone 3 Times  
 Charge: USB  
 Charge Time (approx): 8 hrs.  
 Output: USB / DC 5V 1A  
 Input: USB / DC 5V 1A (Max)  
 Operation Temperature: 0°C ~ 35°C (32°F ~ 95°F)  
 Storage Temperature: -20°C ~ 45°C (-4°F ~ 113°F)  
 Power Indicator: 4 LED's  
 Weight: 158 g / 5.56 oz

## BATTERY CHARGING

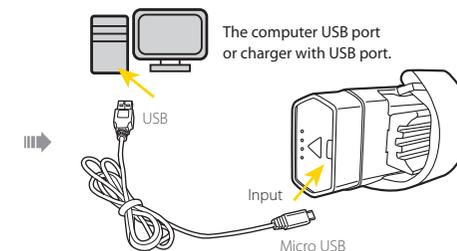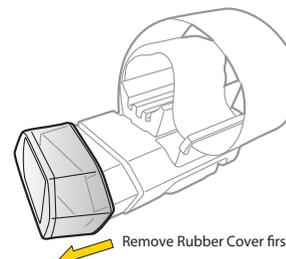

Charging Time (approx): **8 hours**

- Charging and operating times may vary depending on ambient temperature.
- Charging with USB charger will take longer.

## WARNING

- Do not charge battery in a damp or dusty location or areas affected by oil fumes or steam.
- Do not charge battery on carpet, fabric materials or near a heater or in direct sunlight.
- Do not disassemble or modify the battery case.
- Do not connect or disconnect USB charging cord with wet hands as you may risk fire and/ or electric shock.
- Do not leave battery connected to charger over 48 hours continuously.
- Do not insert metal parts into the terminal.
- It is normal for the battery charger and battery to become hot during charging. Please use caution when charging battery.

## CAUTION

1. Although PowerPack is water-resistant (under normal weather conditions of rain, etc.) never intentionally submerge it under water or connect to smartphone when it's raining.
2. If PowerPack is dropped, battery case may be cracked and a short circuit may occur. Replace PowerPack immediately.
3. If the PowerPack body or parts become dirty, gently clean with a soft towel using mild soap and water. Never use harsh chemicals to clean the PowerPack.
4. When connecting and disconnecting the plug and socket, hold the connector ends only. Do not attempt to connect or disconnect the plug/socket interface by pushing or pulling on wires or serious damage to wires and connectors will occur.
5. After long periods of non-use, the battery will lose charge. Always charge the battery fully before each use and storage.
6. Maintain the battery by charging it every two months and storing it in a cool, dry place to prevent from decreasing its lifespan. 3 to 5 charging cycles are needed to attain full capacity after a long period of non-use.
7. Safely and properly dispose of the old Li-ion batteries according to your local regulations.
8. Topeak does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss.
9. Keep out of reach of children.
10. Pacemaker users should never use this device.
11. After a few hours of non-use, the battery will turn off automatically. Press the Indicator/ Power button before use.
12. If the Power Indicator does not work after pressing the power button, please recharge the battery immediately.

## RELEVANT ACCESSORIES

RideCase (Works with iPhone 4/ 4S iPhone 5/ 5S)	Waterproof RideCase (Works with iPhone 5/ 5S)	RideCase (Works with New HTC One , Samsung Galaxy S3/ S4)
 Art No. TT9832B (Black) TT9832W (White) TT9833B (Black) TT9833W (White)	 Art No. TT9838BU (Blue) TT9838BG (Gray) TT9838BN (Green) TT9838BY (Yellow) TT9838BR (Red)	 Art No. TT9835B (Black) TT9835W (White) TT9835P (Pink) TT9836B (Black) TT9836W (White) TT9837B (Black) TT9837W (White)

## WARRANTY

1-year Warranty: All mechanical components (body, covers and fasteners) against manufacturer defects only.  
 90-day Warranty: All batteries and cables against manufacturer defects only.  
**Warranty Claim Requirements**  
 To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system alteration, modification, or used in any way not intended as described in this manual.  
 \*The specifications and design are subject to change without notice.  
**Please contact your Topeak dealer with any questions.**  
 For USA customer service call: 1-800-250-3068  
[www.topeak.com](http://www.topeak.com)

