

Victoria		
Series:	Victoria	
Error code:	Description:	Steps:
410	One or several buttons are disabled.	Check whether any buttons are blocked, for example by dirt. Clean the buttons if necessary.
414	Shifting unit connection problems.	Check the connections.
418	One or more buttons on the on-board computer are disabled.	Check whether any buttons are blocked, for example by dirt that has found its way in. Clean the buttons if necessary.
422	Connection problem of the drive unit.	Check the connections.
423	E-bike battery connection problem.	Check the connections.
424	Communication problem between components.	Check the connections.
426	Internal time overflow error.	Restart the system.
430	Internal battery of the on-board computer is empty.	Recharge the battery in its holder or via the USB port.
440	Internal error of the drive unit.	Restart the system.
450	Internal SW error.	Restart the system.
490	Internal error of the on-board computer.	Check the on-board computer.
500	Internal error of the drive unit.	Restart the system.
502	Bicycle lighting error.	Check the lighting and its wiring. Restart the system.
503	Speed sensor error.	Restart the system.
510	Internal sensor error.	Restart the system.
511	Internal error of the drive unit.	Restart the system.
530	Battery error.	Turn off the e-bike, remove the battery and reinsert the battery. Restart the system.

531	Configuration error.	Restart the system.
540	Temperature error.	The battery is outside of the permissible temperature range. Switch off the system and allow the drive unit to either cool down or heat up to the permissible temperature range. Restart the system.
550	An unauthorized consumer has been detected.	Remove the consumer. Restart the system.
602	Internal battery error while charging.	Disconnect the charger, restart the e-bike system and reconnect the charger.
602	Internal battery error.	Restart the system.
603	Internal battery error.	Restart the system.
605	Battery temperature error while charging.	Disconnect the charger. Let the charger cool down.
606	External battery error.	Check the wiring. Restart the system.
610	Battery voltage error.	Restart the system.
620	Charger error.	Replace the charger.
640	Internal battery error.	Restart the system.
655	Multiple battery failure.	Turn off the e-bike, remove the e-bike battery and reinsert the e-bike battery. Restart the system.
656	Software version error.	If the problem persists, contact your e-bike dealer.
X	Internal error of the on-board computer.	Restart the e-bike system.