

@ info@thule.com

www.thule.com  
www.thuleprofessional.com

Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN

# THULE®

SWEDEN

- GB Fitting instructions
- D Montageanleitung
- F Instructions de montage
- NL Montage-instructies
- I Istruzioni per il montaggio
- E Instrucciones de montaje
- PT Instruções de Montagem
- S Monteringsanvisning
- FIN Asennusohje
- EST Paigaldusjuhend
- LAT Stiprināšanas instrukcija
- LIT Pritvirtinimo instrukcijos
- PL Instrukcja montażu
- RU Инструкции по установке
- CZ Návod na montáž
- SK Návod na montáž
- SLO Navodila za pritrjevanje
- HR Uputa za sastavljanje
- HU A felszerelés módja
- GR Οδηγίες συναρμολόγησης
- TR Montaj talimatları
- 中文 安装说明
- 日本語 取扱(取付)説明書
- 한국어 장착 지침
- ไทย คำแนะนำการติดตั้ง

*CITROËN C8, 5-dr MPV, 02- (with T-profile)*

*CITROËN Evasion, 5-dr MPV, 94-01 (with T-profile)*

*FIAT Ulyssé, 5-dr MPV, 94-01, 02- (with T-profile)*

*LANCIA Phedra, 5-dr MPV, 02- (with T-profile)*

*LANCIA Zeta, 5-dr MPV, 94-01 (with T-profile)*

*PEUGEOT 806, 5-dr MPV, 94-01 (with T-profile)*

*PEUGEOT 807, 5-dr MPV, 02- (with T-profile)*







## RAPID FIXPOINT XT

**3035**  
133035
















713•3DF/8F/501-3035-02







# Follow me...

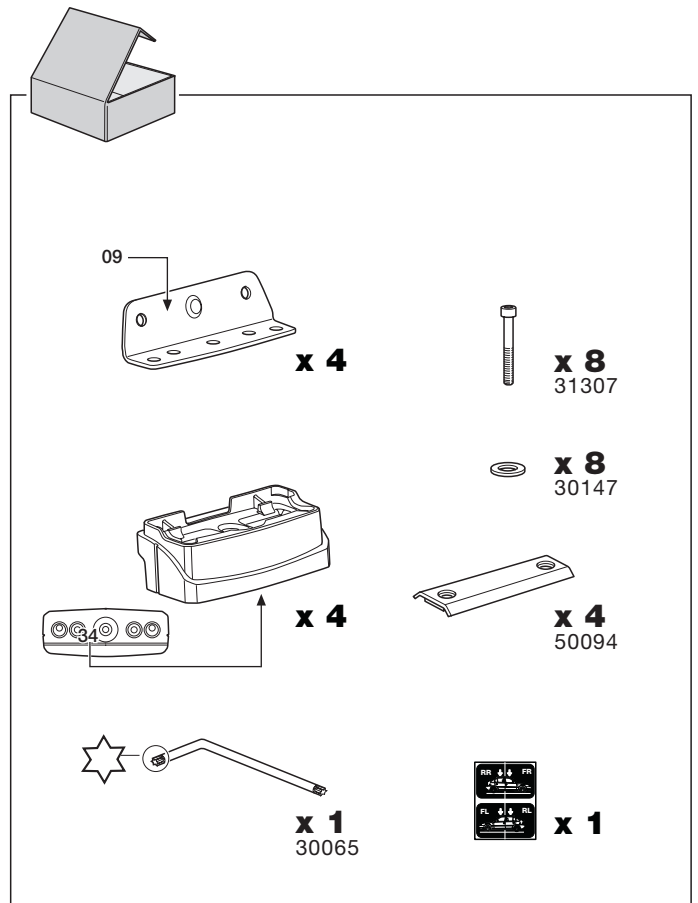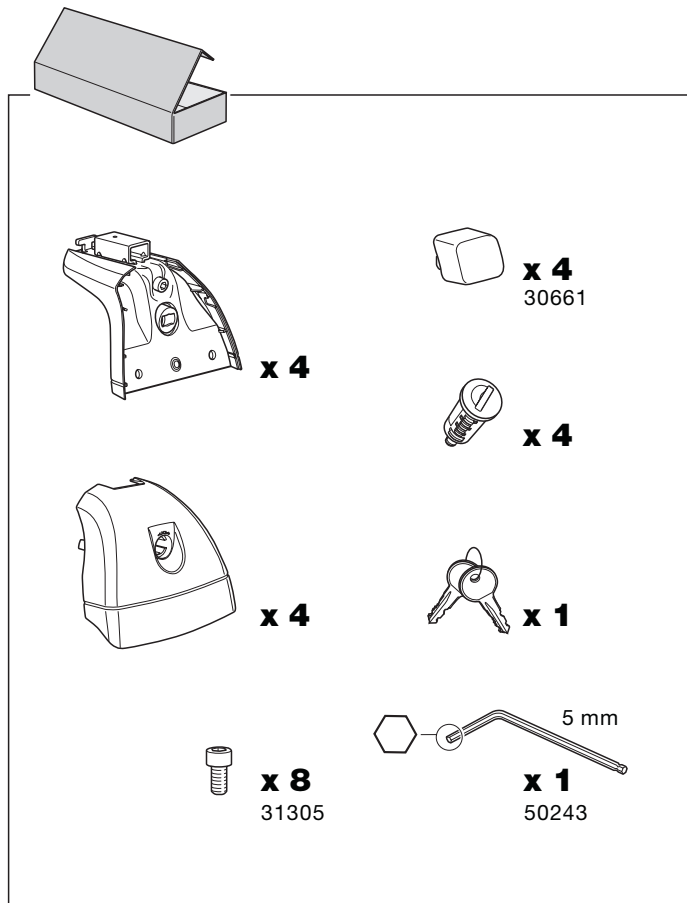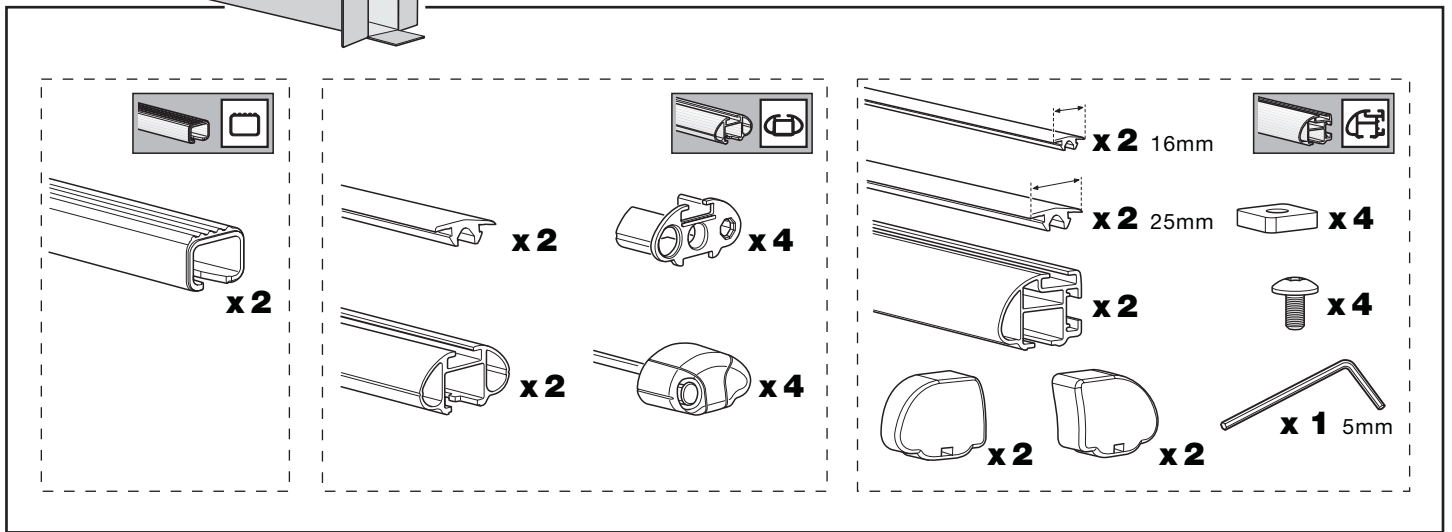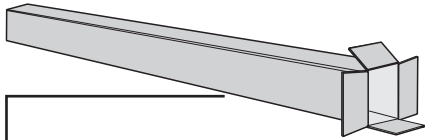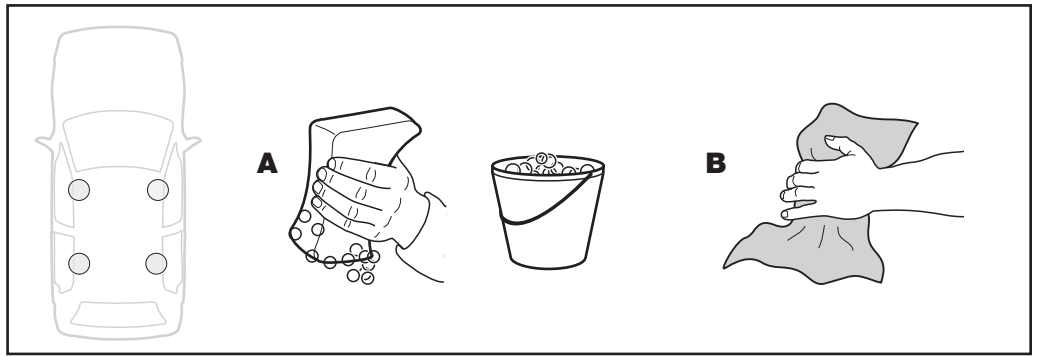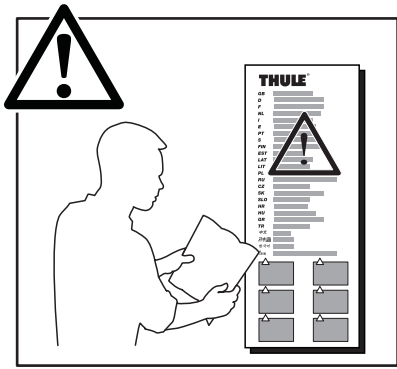

1

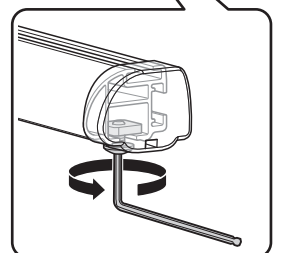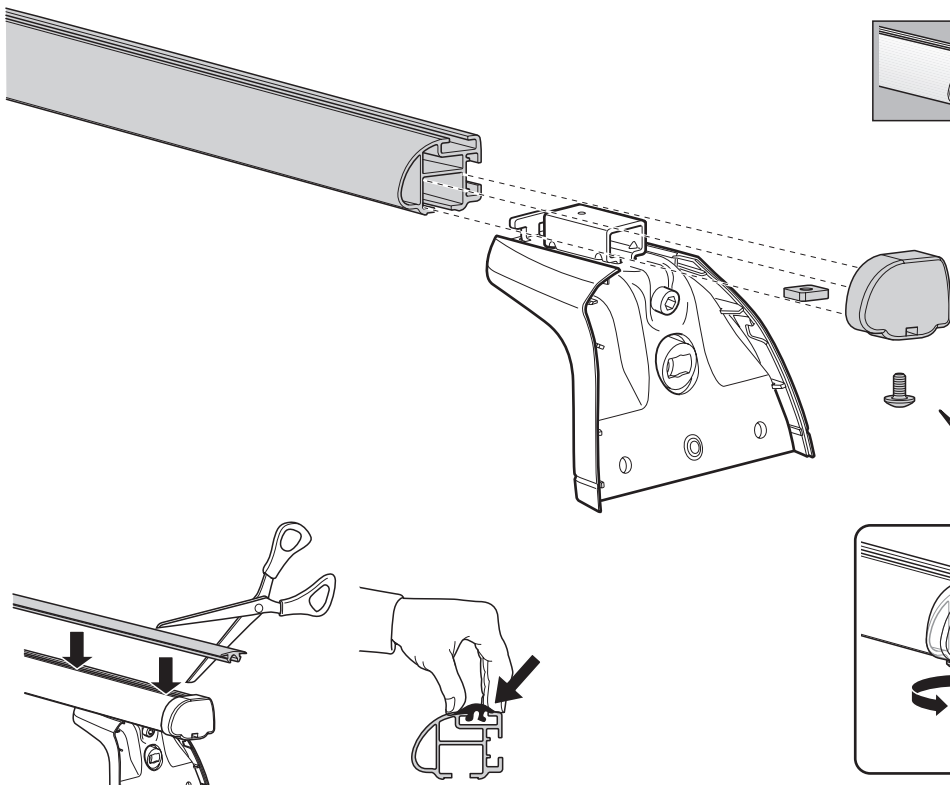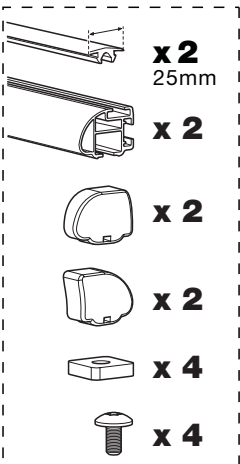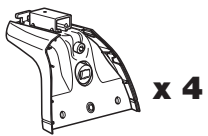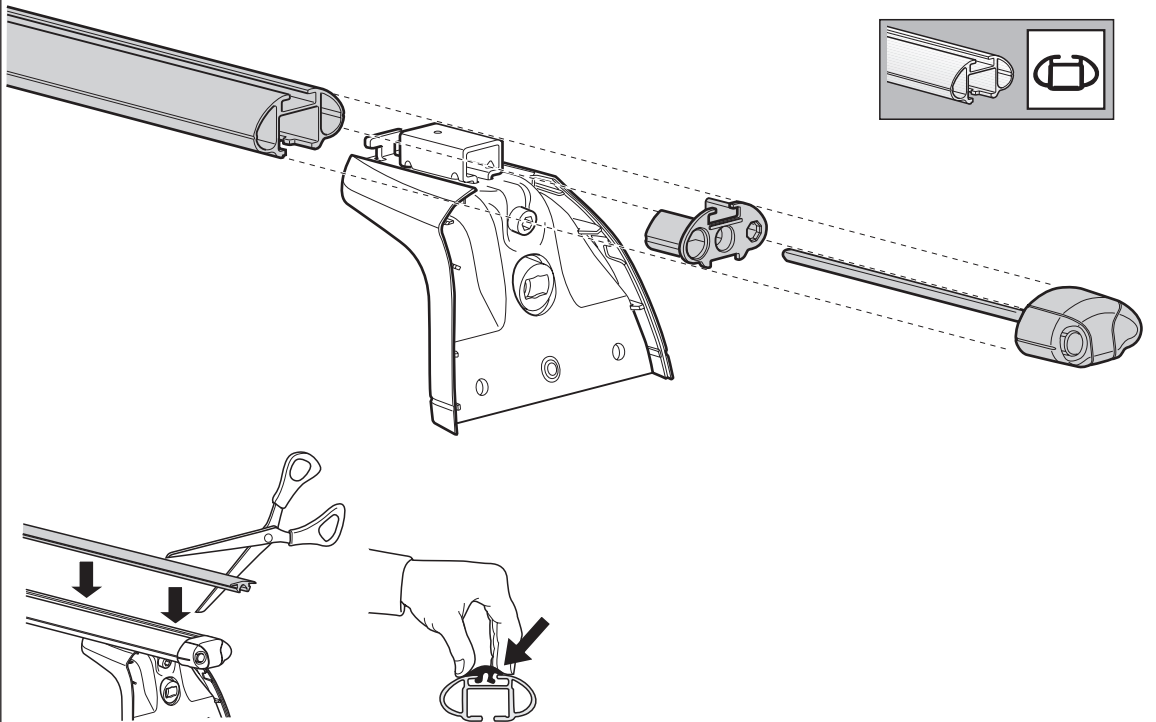
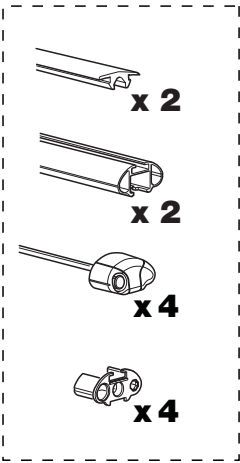
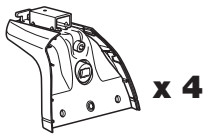

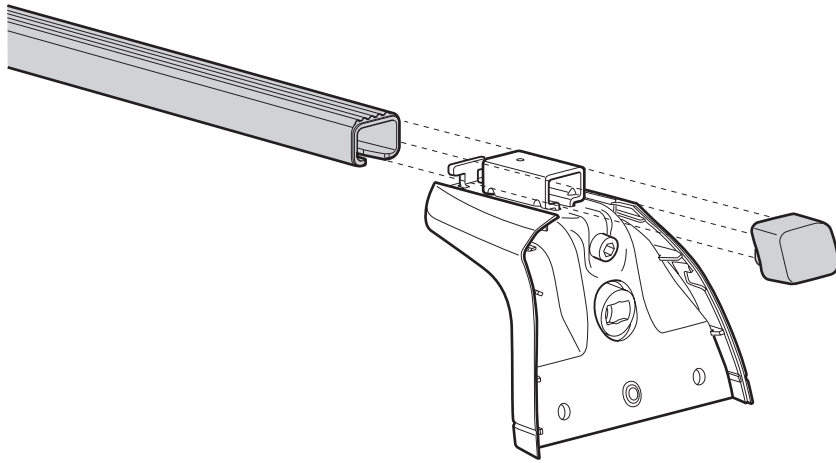

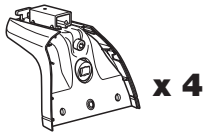


**2**

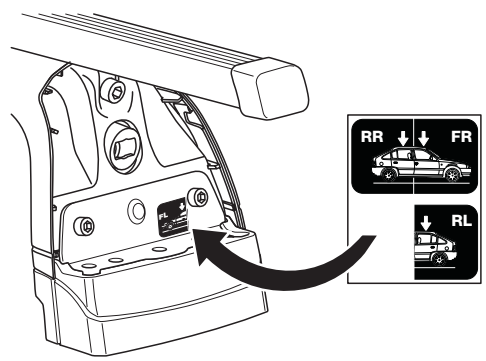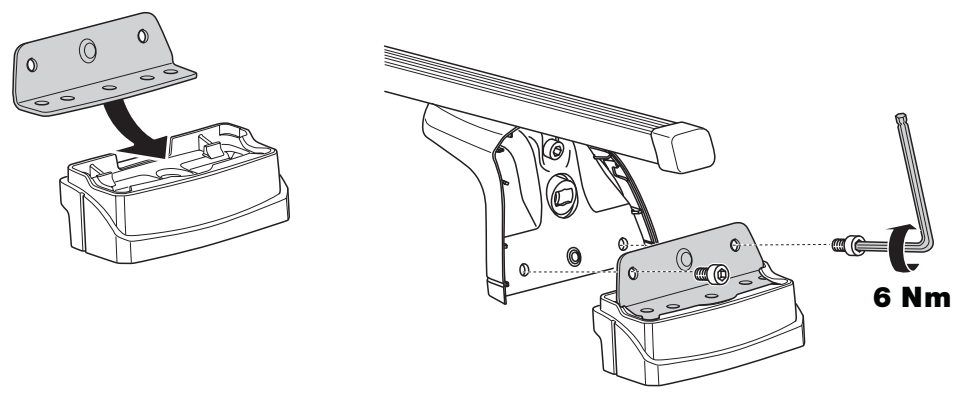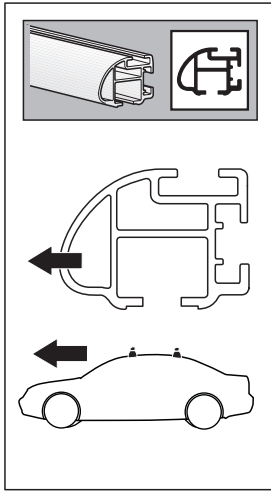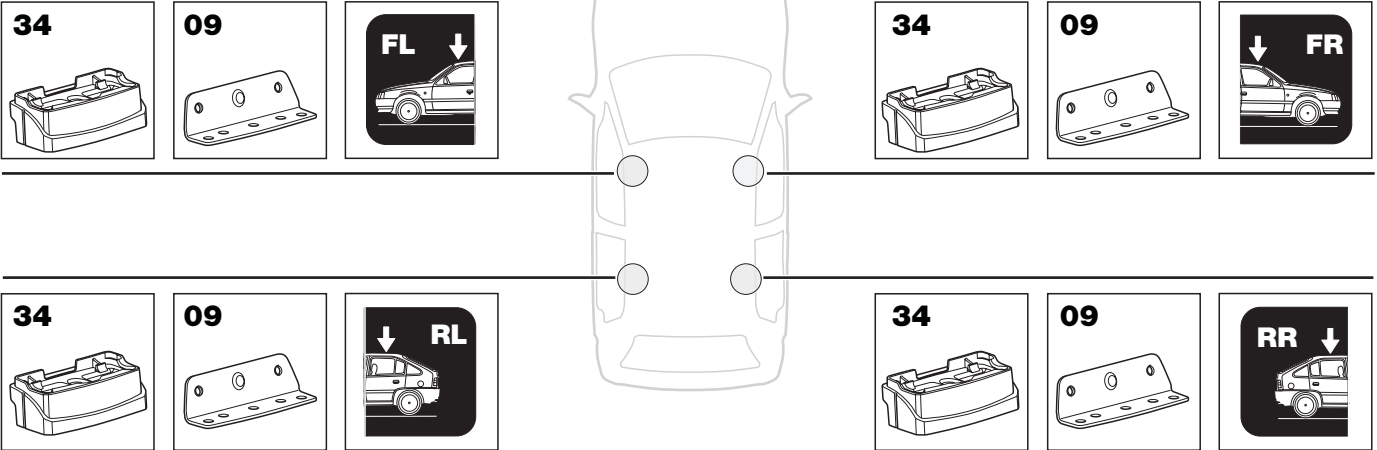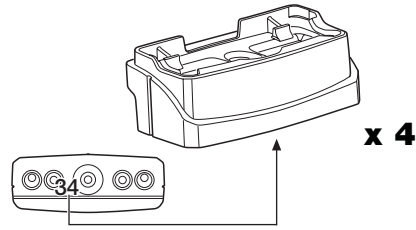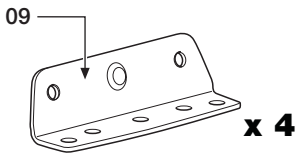











**3**

- CITROËN C8, 5-dr MPV, 02- (with T-profile)
- CITROËN Evasion, 5-dr MPV, 94-01- (with T-profile)
- FIAT Ulyssé, 5-dr MPV, 94-01, 02- (with T-profile)
- LANCIA Phedra, 5-dr MPV, 02- (with T-profile)
- LANCIA Zeta, 5-dr MPV, 94-01- (with T-profile)
- PEUGEOT 807, 5-dr MPV, 02- (with T-profile)

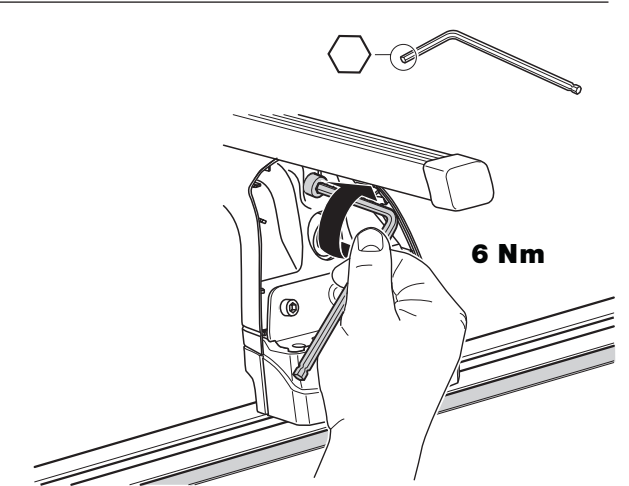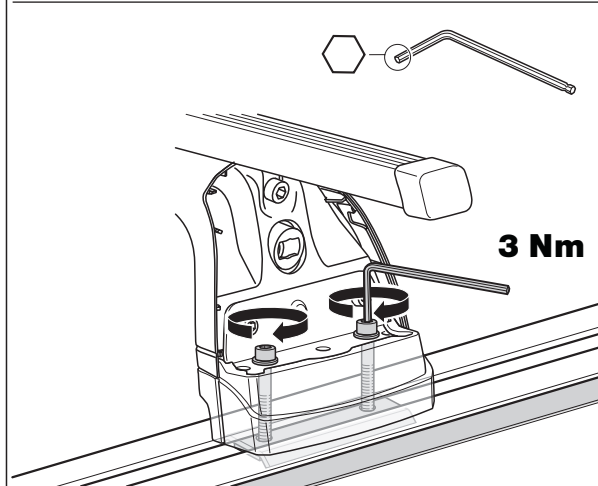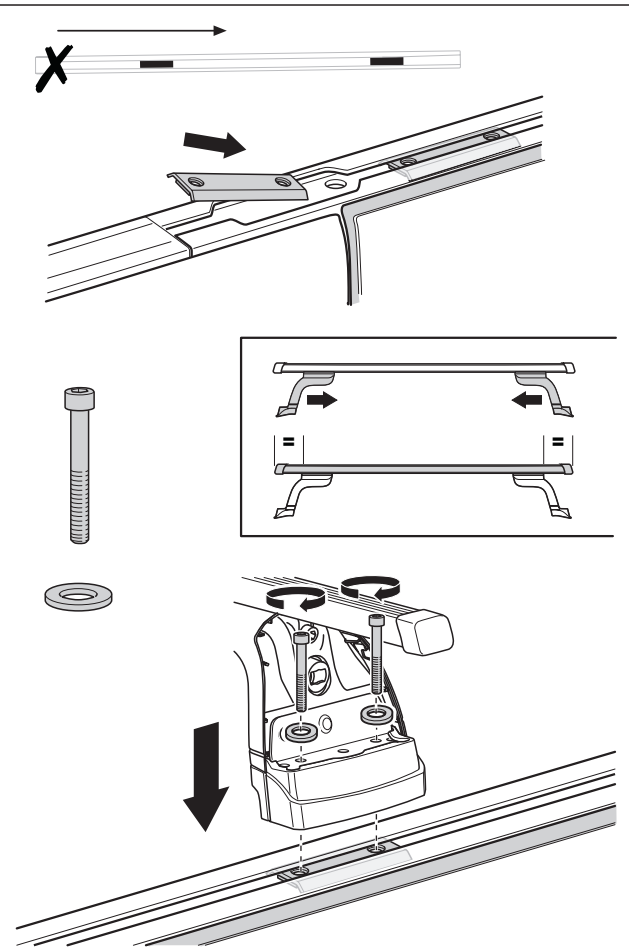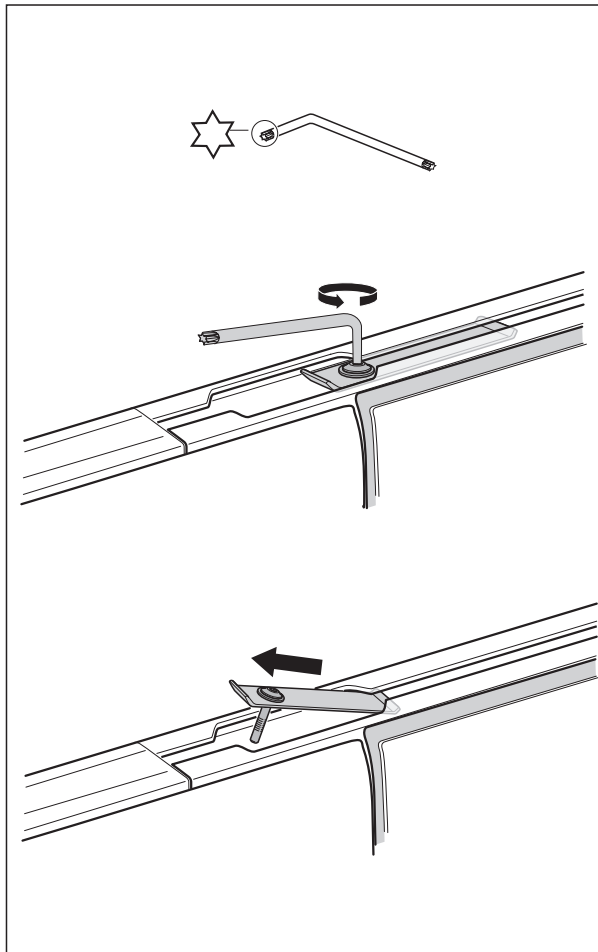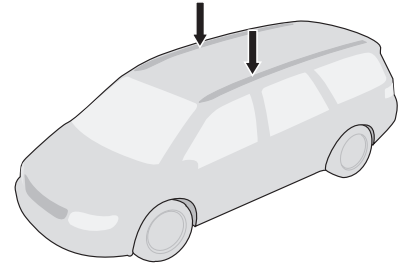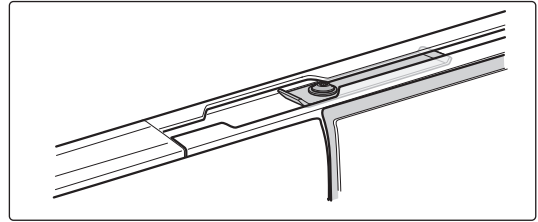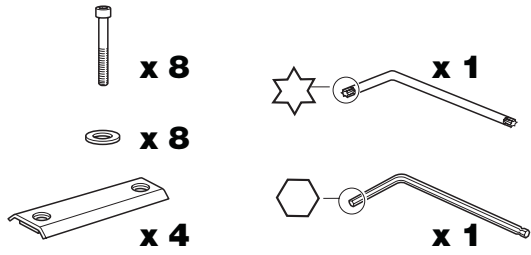

PEUGEOT 806, 5-dr MPV, 94-01 (with T-profile)

-  x 8
-  x 4
-  x 8
-  x 1

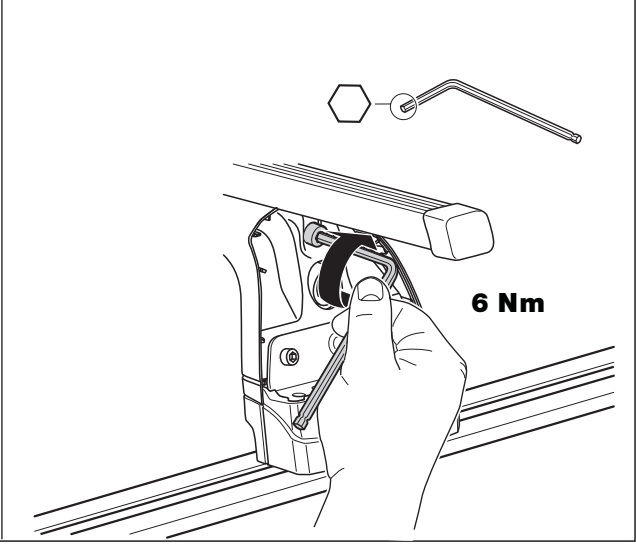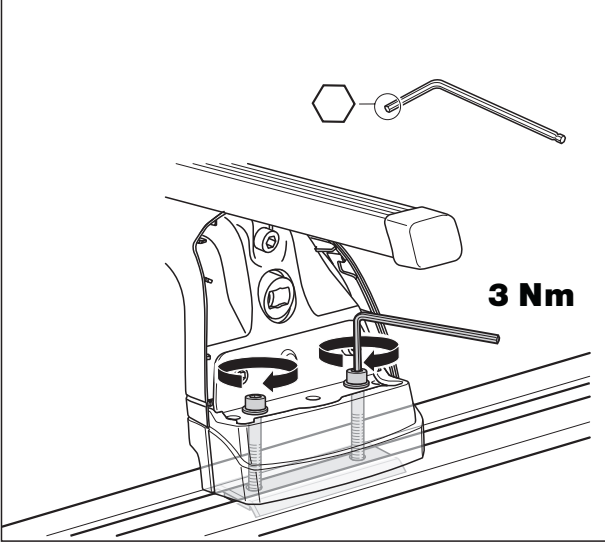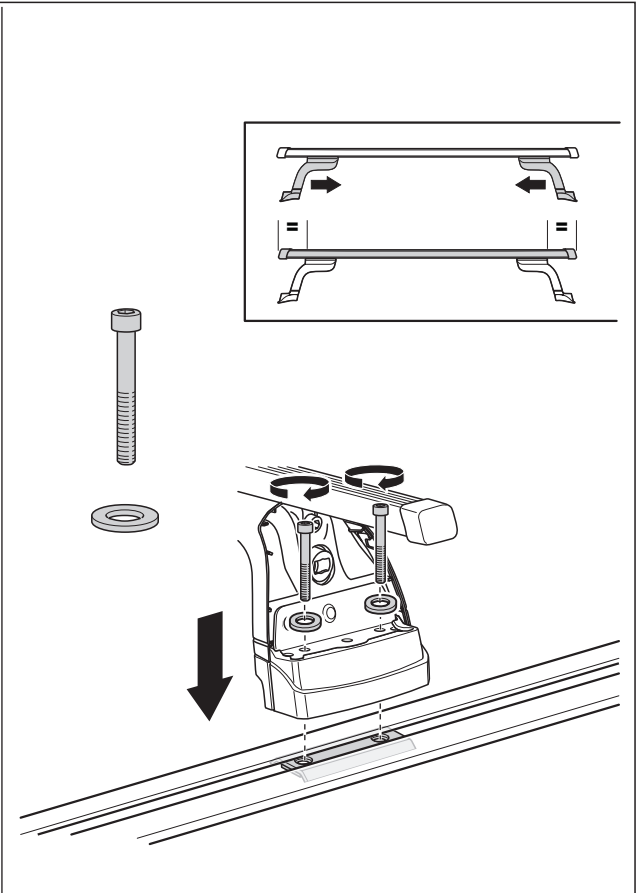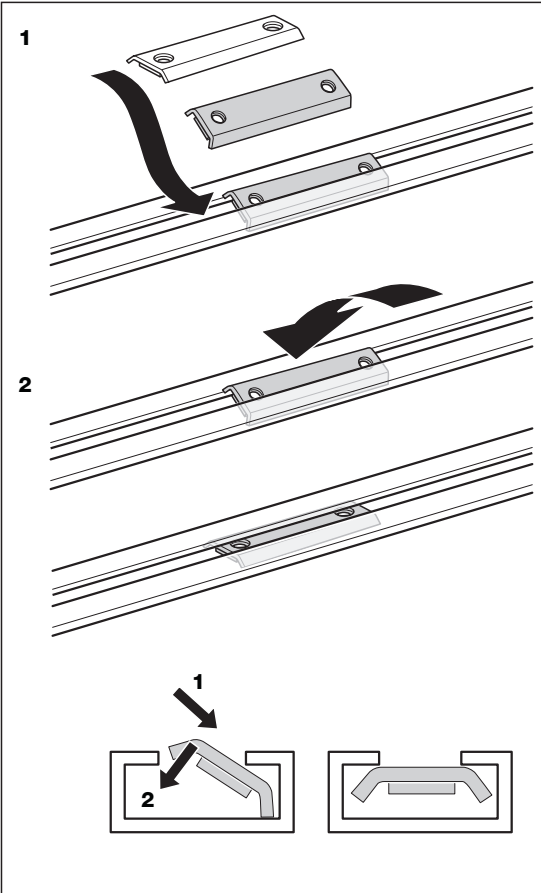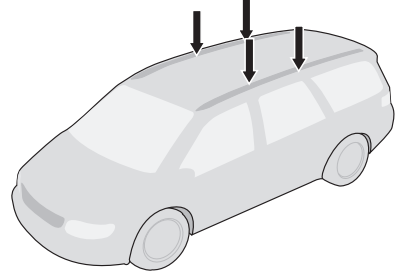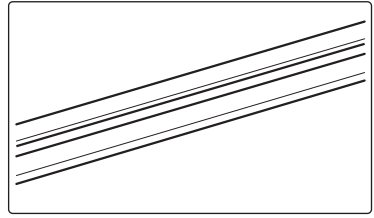

**4**




**x 4**



**x 4**



**x 1**

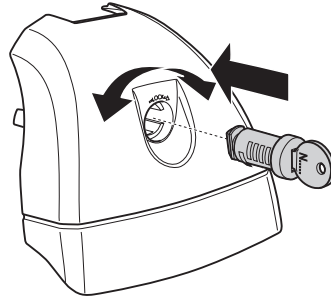




**5**



**x 1** 5mm



**x 4**

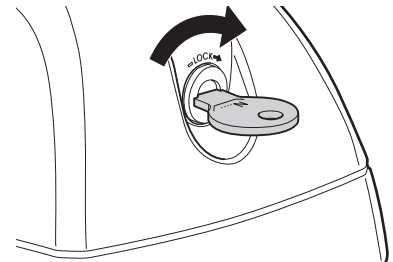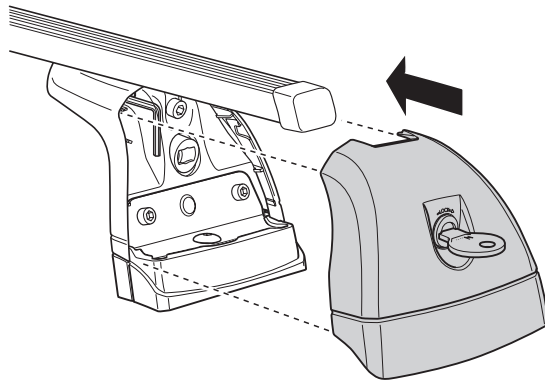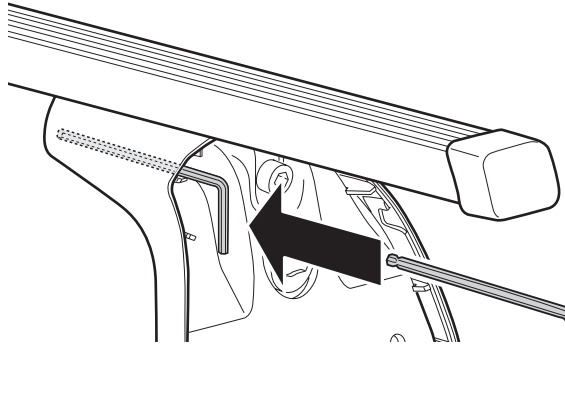

**6**

