



D

! BITTE ZUERST LESEN !

- Dieses Dokument auf **A4**-Papier (21 x 29,7 cm) mit **100 % Größe** ausdrucken.
- Pfeil unten messen, um **Maßstab zu überprüfen**.



- Legen Sie die Ausdrucke zusammen und folgen Sie dabei dem Nummerierungssystem am Rand jeder Seite. Stellen Sie sicher, dass die Kreuze ausgerichtet sind **und** sich überlappen.
- Kleben Sie die Blätter zusammen und schneiden Sie um den Umriss der Oberrohrtasche herum.
- Bedenken Sie beim Anbringen dieser gedruckten Vorlage an Ihrem Fahrrad, dass die Oberrohrtasche flexibler ist, da sie aus Stoff besteht.

A1
X

EN

! READ THIS FIRST !


- Print this document on A4 sheets of paper (21 x 29,7 cm).
- Ensure you print at 100 % scale.
- Measure arrow below to **check scale is correct**.



- Fit the prints together following the numbering system on the edge of each page. Ensure crosses are aligned **and** overlapping.
- Tape the sheets together and cut around the Top Tube Bag's outline.
- When fitting this printed template to your bike, keep in mind that the Top Tube Bag will be more flexible as it is built from fabric.

A1
X

X

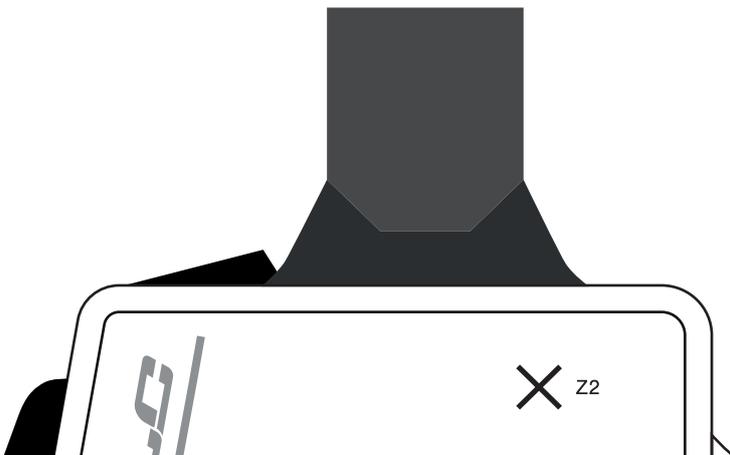

X Z2

D | MABSTABLICHES BEISPIEL. EN | SCALE EXAMPLE.

