


- 2** 2 mm hexagon wrench
- 2.5** 2.5 mm hexagon wrench
- 4** 4 mm hexagon wrench

****** When installing parts onto a carbon frame/handlebar, confirm the recommended tightening torque with the carbon frame or handlebar manufacturer.
 This will prevent damage to the frame/handlebar due to over-torquing or inadequate securing of the components.

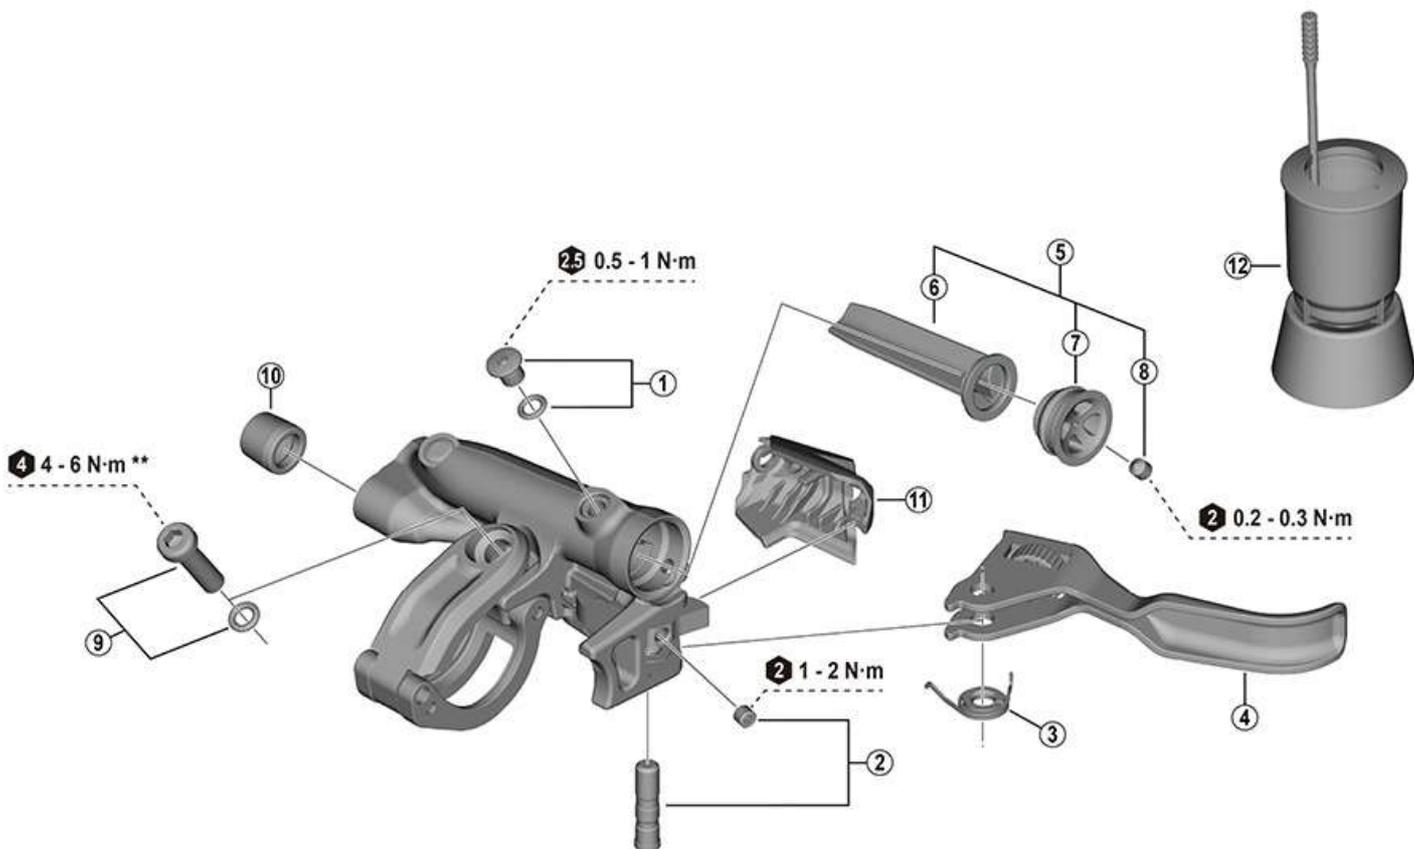

- 2** 2 mm hexagon wrench
- 2.5** 2.5 mm hexagon wrench
- 4** 4 mm hexagon wrench

****** When installing parts onto a carbon frame/handlebar, confirm the recommended tightening torque with the carbon frame or handlebar manufacturer. This will prevent damage to the frame/handlebar due to over-torquing or inadequate securing of the components.