


# NEXUS 8-Speed Internal Hub w/Coaster Brake SG-C6061-8C

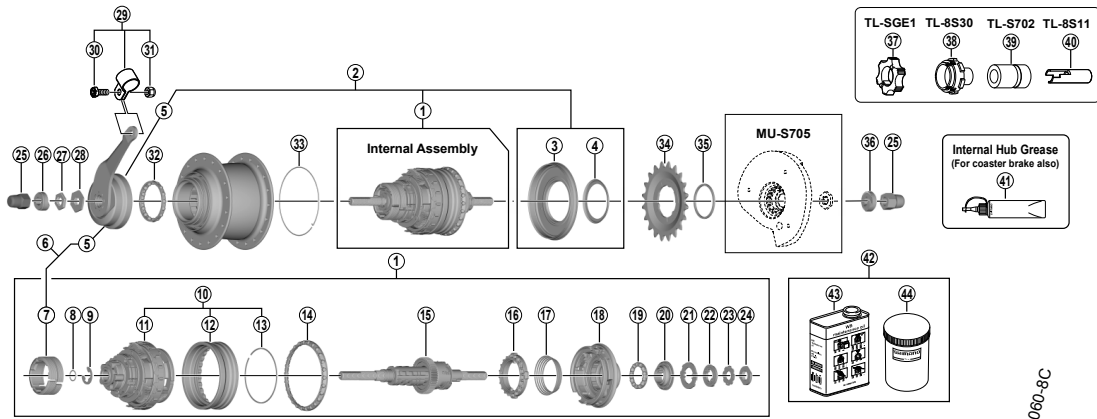

SG-C6061-8C

ITEM NO.	SHIMANO CODE NO.	DESCRIPTION	INTERCHANGE-ABILITY
1	Y3ED98010	Internal Assembly (Axle Length 187 mm)	
2	Y3ED98020	Internal Assembly (Axle Length 187 mm), Brake Arm Unit, Right Hand Dust Cap A & B	
3	Y34R98110	Right Hand Dust Cap A w/Seal (B spec.)	A
4	Y34R0E000	Right Hand Dust Cap B (B spec.)	A
5	Y31N98050	Brake Arm Unit (3 Serration)	A
6	Y31N98060	Brake Shoe Unit & Brake Arm Unit	A
7	Y37G98020	Brake Shoe Unit (3 pcs.)	A
8	Y37E08000	O-Ring	A
9	Y37G19000	E-Ring	A
10	Y3ED98030	Ring Gear Unit	B
11	Y3ED98040	Carrier Unit	B
12	Y35P11010	Ring Gear 1	A
13	Y34R80000	Ring Gear 1 Stop Ring	A
14	Y38X98050	Ball Retainer O (3/16" x 26)	A
15	Y3ED98050	Hub Axle Unit (Axle Length 187 mm)	
16	Y35P98060	Clutch Unit	A
17	Y34R21000	Return Spring A	A
18	Y37H98050	Driver Unit	A
19	Y34R98070	Ball Retainer P (3/16" x 13)	A
20	Y37S98040	Right Hand Cone w/Seal	A
21	Y37S07000	Driver Plate	A
22	Y37S98050	Lock Washer	A
23	Y38F17000	Right Hand Lock Nut Washer	A
24	Y38F16000	Right Hand Lock Nut	A
25	Y31414010	Cap Nut (3/8")	A
26	Y33M39510	Non-turn Washer 5L (Brown)	A
	Y33M39610	Non-turn Washer 6L (White)	A
	Y33M39710	Non-turn Washer 7L (Gray)	A
27	Y35P28000	Left Hand Lock Nut (3 mm)	A
28	Y35P22000	Stop Nut	A
29	Y33F98090	Brake Arm Clip Unit (5/8")	A
	Y33F98100	Brake Arm Clip Unit (3/4")	A
30	Y75M06000	Clip Screw (M6 x 16)	A
31	Y31727200	Clip Nut	A
32	Y38R98190	Ball Retainer B (3/16" x 16)	A
33	Y35J11100	Hub Shell Slide Spring	A
34	Y32203220	Sprocket Wheel 16T (Silver)	A
	Y32203420	Sprocket Wheel 18T (Silver)	A
	Y32203520	Sprocket Wheel 19T (Silver)	A
	Y32203620	Sprocket Wheel 20T (Silver)	A
	Y33060000	Sprocket Wheel 21T (Silver)	A
	Y33060100	Sprocket Wheel 22T (Silver)	A
	Y33060200	Sprocket Wheel 23T (Silver)	A
35	Y32120100	Snap Ring C	A
36	Y33Z20500	Non-turn Washer 5R (Yellow)	A
	Y33M39600	Non-turn Washer 6R (Silver)	A
	Y33M39700	Non-turn Washer 7R (Black)	A
37	Y20W10000	TL-SGE1 1st Gear Set Tool	A
38	Y70800300	TL-8S30 Carrier Unit Tool	A
39	Y13098022	TL-S702 Right Hand Cone Installation Tool	A
40	Y70800600	TL-8S11 Right Hand Cone Removal Tool	A
41	Y04120800	Internal Hub Grease (Net. 100g)	A
42	Y00298010	WB maintenance oil set	A
43	Y00201000	WB maintenance oil (1L)	A
44	Y00201100	Bottle	A
-	Y34R0D000	Right Hand Hub Cup	A

A: Same parts.

B: Parts are usable, but differ in materials, appearance, finish, size, etc.

Absence of mark indicates non-interchangeability.

Specifications are subject to change without notice.

May-2016-4039

© Shimano Inc. 1

# SHIMANO