

Important Safety Information

WARNING

- When installing components, be sure to follow the instructions that are given in the instruction manuals. It is recommended that you use only genuine Shimano parts. If parts such as bolts and nuts become loose or damaged, the bicycle may suddenly fall over, which may cause serious injury. In addition, if adjustments are not carried out correctly, problems may occur, and the bicycle may suddenly fall over, which may cause serious injury.
- After reading the instruction manual thoroughly, keep it in a safe place for later reference.
- If you have any questions, consult a dealer or an agency.

CAUTION

- Be sure to shift the lever one gear at a time, and reduce the force being applied to the pedals during shifting. If you try to force operation of the shifting lever while the pedals are being turned strongly, your feet may come off the pedals and the bicycle may topple over, which could result in serious injury.
- Never place your foot on the bell crank. Otherwise, gear shifting may not function properly.

Note:

For maximum performance we highly recommend Shimano lubricants and maintenance products. Products are not guaranteed against natural wear and deterioration from normal use and aging.

SI-0123A-001


REVOSHIFT Lever/ Bell Crank 4 /Bell Crank 6 (For internal 3-speed hubs)

Instructions for use

Be sure to read these technical service instructions in conjunction with the technical service instructions for the Inter-3 hub.

REVOSHIFT lever operation


Turn the REVOSHIFT lever to shift one gear at a time.

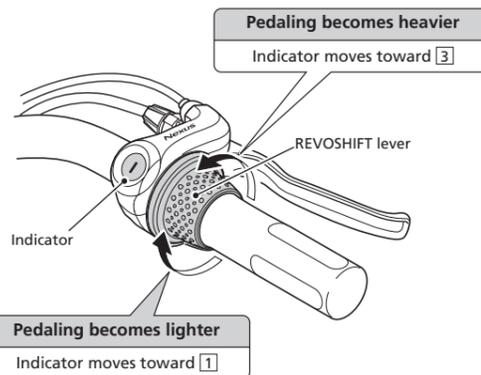


- 1.....Starting/Riding on sandy or rough road surfaces/Riding up slopes/Carrying heavy loads/Riding into headwinds
- 2.....Riding on flat road surfaces
- 3.....Riding at high speeds

Installation of the lever


Install the lever as shown in the illustration.

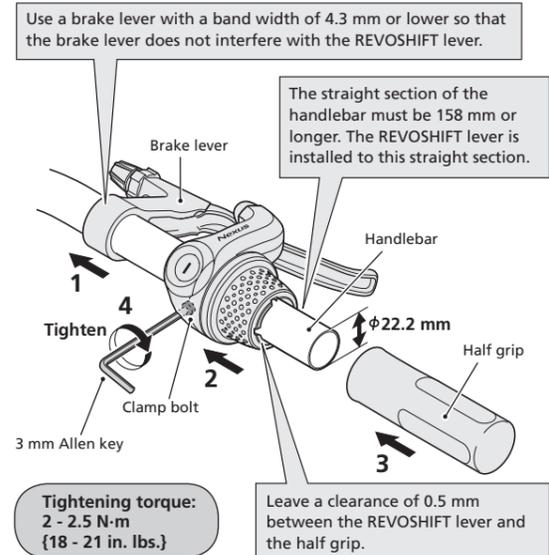

Installation of the shifting cable

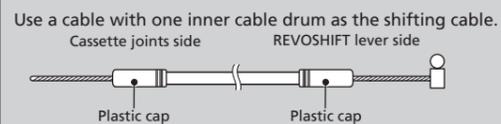


- Set the REVOSHIFT lever to 1.

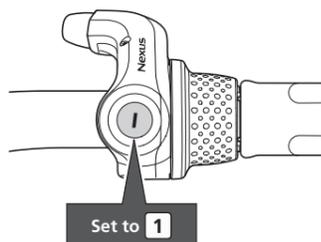

REVOSHIFT lever side


- Loosen the two cover fixing screws, and then remove the cover.

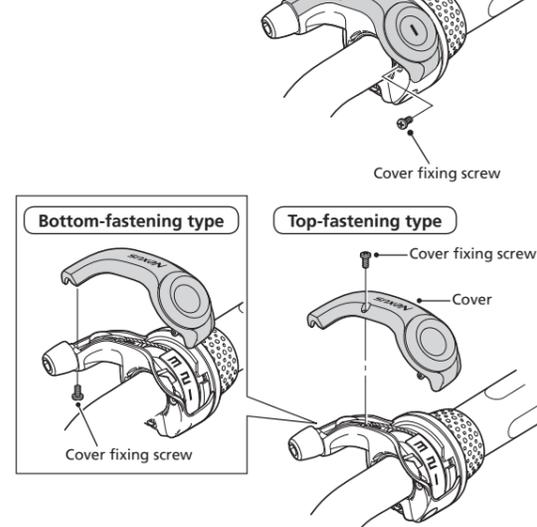

Note:


The cover is fastened from the top or bottom, depending on the type being used. Check the specifications and remove the cover accordingly.

- Connect the inner cable to the connecting cable. Hook the inner cable drum in the hole in the connecting cable and insert the inner cable into the groove in the outer holder.

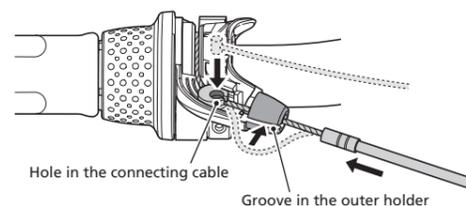

- Fasten the cover with the two cover fixing screws.

Tightening torque:
0.1 - 0.2 N-m {0.9 - 1.7 in. lbs.}

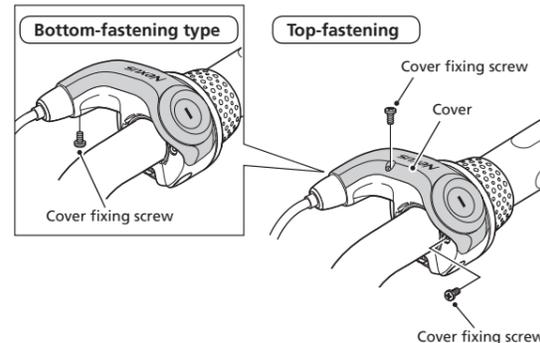


Note:


The cover is fastened from the top or bottom, depending on the type being used. Check the specifications and attach the cover accordingly.

Bell crank side


- Loosen the cover fixing screw, and then remove the bell crank cover.

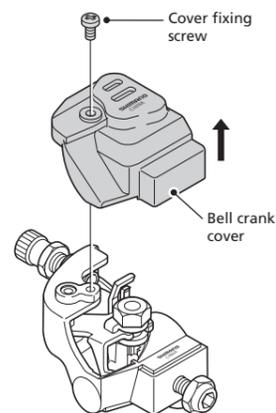

- Loosen the inner cable fixing nut on the main bell crank unit. Next, pass the inner cable from the cable adjusting bolt along the groove in the link and then in between the link and the inner cable fixing plate.

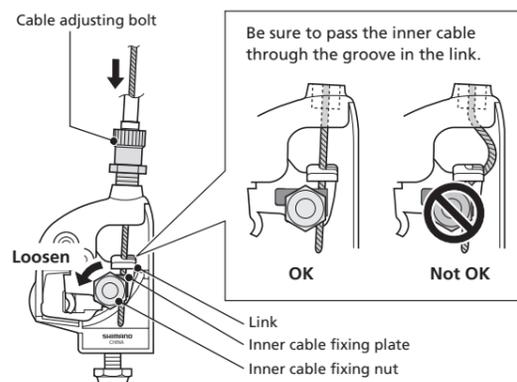


- Set the REVOSHIFT lever to 2. Next, pull the inner cable so that the edges of the link on the main bell crank unit are between the two yellow lines on the window, and then tighten the inner cable fixing nut at that position.

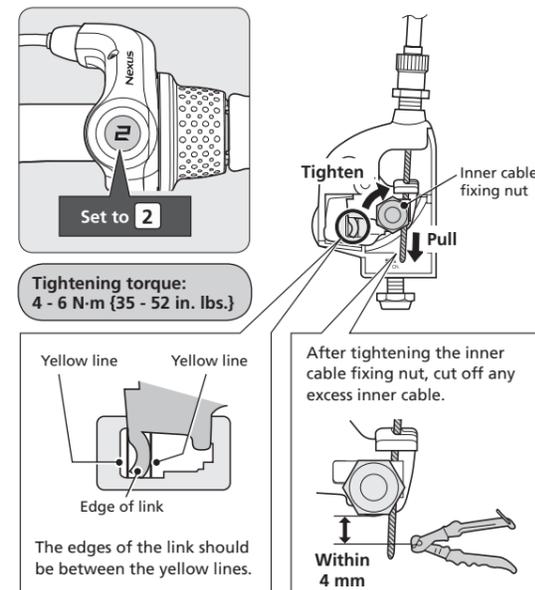

- Replace the bell crank cover and tighten the cover fixing screw.

Installation of bell crank


- Insert the push rod into the hub axle.

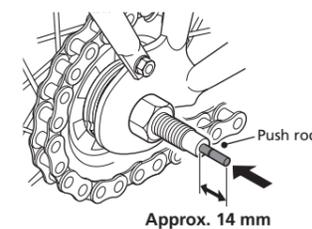

The end of the push rod should project from the end of the hub axle by approximately 14 mm.


- While pushing the main bell crank unit onto the hub axle, align the serrations inside the main bell crank unit with the hub nut, and then push the main bell crank unit on until it touches the end of the hub axle. In this position, tighten the main unit installation bolt onto the hub axle.

Tightening torque:
3 - 5 N-m {27 - 43 in. lbs.}

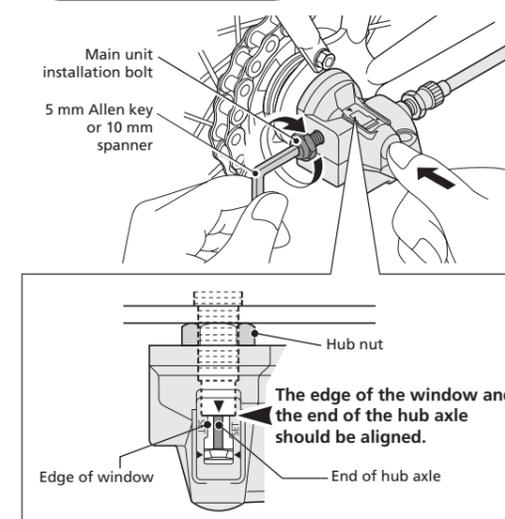


Adjusting bell crank


- Set the REVOSHIFT lever to 2. Next, turn the cable adjusting bolt until the red line on the push rod is aligned with the end of the hub axle.

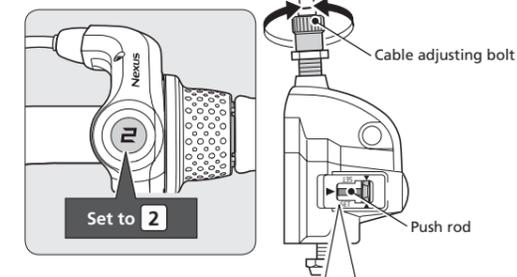

The red line on the push rod and the end of the hub axle should be aligned.




If the red line on the push rod is not visible, adjust so that the yellow section of the link is between the two yellow lines on the window.



- While turning the crank arm, move the REVOSHIFT lever from 3 to 1 and then from 1 back to 3 two or three times to check the gear shifting. Set the REVOSHIFT lever back to 2 and check that the red line on the push rod is aligned with the end of the hub axle.

If they are not aligned, turn the cable adjusting bolt to make fine adjustments.


- After adjusting the bell crank, tighten the cable adjusting nut to secure the cable adjusting bolt.

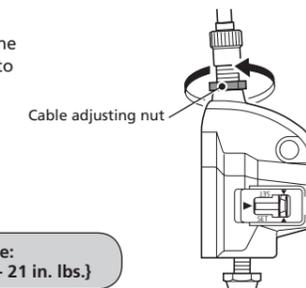

Tightening torque:
1.5 - 2.5 N-m {14 - 21 in. lbs.}

Securing the shifting cable to the frame

Secure the cable to the frame with the outer casing bands.

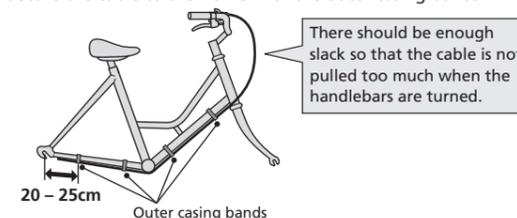

* Service Instructions in further languages are available at: <http://si.shimano.com>

SHIMANO

SHIMANO AMERICAN CORPORATION
One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.
Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222

SHIMANO INC.
3-77 Oimatsu-cho, Sakai-ku, Sakai-shi, Osaka 590-8577, Japan

Please note: Specifications are subject to change for improvement without notice. (English)
© Apr. 2014 by Shimano Inc. HTR