

## Installation instructions for the Yepp® Junior Easyfit

### The Yepp® Junior Easyfit is suitable for:

- (A) fitting to an Easyfit luggage carrier\* or
- (B) fitting in combination with the Yepp Maxi Easyfit carrier (art. 020404)

The Yepp Junior Easyfit is suitable for carrying children up to a maximum weight of 35 kg (about 9 years old) .

\*The Yepp Junior Easyfit can be installed on cycles with luggage carriers that are equipped with an Easyfit frame, have a load capacity of 35 kg and meet EN 14872. Please go to our website for a list of cycles that are equipped with an Easyfit luggage carrier. [www.yepp.nl](http://www.yepp.nl)

If the luggage carrier is not equipped with an Easyfit frame but does meet EN 14872 (35kg), the Yepp Junior can be used in combination with the Yepp Easyfit carrier (article no. 020404).

### Installing on a luggage carrier with the special Easyfit frame:

The Yepp Junior is supplied fully assembled and can therefore be used straight out of the box. If your cycle is equipped with the special Easyfit frame, you can fit the seat directly on the carrier.

- Press and hold the red sliding button while at the same time turning the grey knob counter-clockwise with the slide fully pushed in. Then position the Yepp Junior on the carrier and put the front hook under the front crosspiece. Place the Yepp Junior in horizontal position and press the red slide button again while at the same time turning the round grey knob clockwise until you feel resistance. The knob has an internal lock to keep the Yepp Junior from coming loose by itself. (**pic. 2 + 3 + 4**)
- ALWAYS fasten the safety strap around the bicycle frame and close the buckle (**pic. 6**)
- Mount the foot rest on the frame at the correct height (**pic. 5**)
- To release the seat, perform the above actions in reverse order
- Always make sure the seat is properly secured and backlash by lifting it.
- Make sure the Yepp Junior is always secured by turning the integrated lock to the "locked" position using the key supplied. It is a safety precaution and prevents possible theft of the Yepp Junior. Make a note of the key number so you can get a replacement if the original key is lost.
- **Caution!** Always press and hold the red button while fixing and loosening.

### Warnings and safety advice

- **Caution!** Never modify the seat yourself.
- Remove the seat when putting the cycle on a cycle carrier on a car.
- **Caution!** Do not use the seat if any part of it is faulty.
- **Caution!** Never leave your child unattended in the seat.
- **Caution!** Note that cycling with a child in a child seat can affect the way the cycle behaves, especially when going round corners and when riding off.
- **Caution!** The Yepp Junior is not suitable for use on a moped
- Always fasten the safety belt, even if you are not carrying a child in the seat.
- GMG recommends that your child wears a properly-fitting helmet.
- Use a good two-legged stand.
- Make sure that your bicycle has a good solid coat guard to prevent that the feet of your child will be able to be trapped in the wheel.
- Please do not transport children under the age of 6 or less than 22 kg, for these children GMG has the Yepp Maxi
- Check regularly of all fittings are sufficiently tight.
- The soft cushion of the Yepp Junior can easily be cleaned with a lukewarm soapy water. Never use aggressive cleaning systems.

- Do not add bags or other luggage to the seat
- If you have any doubts regarding the assembly of this seat on your bicycle, we recommend you obtain further information from your bicycle retailer.

### Guarantee:

GMG guarantees that this product has been manufactured according to the latest European safety standards and quality requirements for this product and that this product at the time of purchasing has no defect in workmanship and material. During production various quality checks have been performed. In case, despite all our efforts, during our guarantee period of 24 months, this product shows a material and/or manufacturing fault (with normal use as described in this manual), than GMG is required to respect this guarantee. In that case please contact your dealer. For detailed information on the application of the guarantee you can contact your dealer.

### The guarantee is excluded in the following cases:

- In case of use different than described in the manual.
- The product is brought for repair through a not authorized dealer.
- The product is not presented with the original proof of purchase to the manufacturer.
- Repairs were performed by third party or not authorized retailer.
- The defect was caused by misuse, careless use or maintenance, by neglect or impact damage to the seat and/or frame.
- In case of normal wear to parts, which you may expect during daily use of a product.

### Since when?

The guarantee term starts at the date of purchasing of the product.

### For what period?

The guarantee is for a period of 24 consecutive months. The guarantee is only for the first owner and cannot be transferred.

### What do you have to do?

After purchasing the product you must carefully keep the proof of purchase. The date of purchasing must be clearly visible on the proof of purchase. In case of any problems or defects you have to go to the retailer. You cannot demand exchange or return. Repairs will not affect the duration of the guarantee. Products sent directly to the manufacturer are **not** eligible for guarantee.


This warrantee is according to the European Standard 99/44/EG dated May 25<sup>th</sup> 1999.

### Guarantee specifications:

	< 6 months after purchase	> months after purchase
Corrosion	✓	?
Harness wear	✓	?
	✓ = Guarantee	? = Guarantee possible after inspection

Rights of modifications reserved

GMG bv – Tingietersweg 125 – 2031 ER Haarlem – The Netherlands – [www.yepp.nl](http://www.yepp.nl)

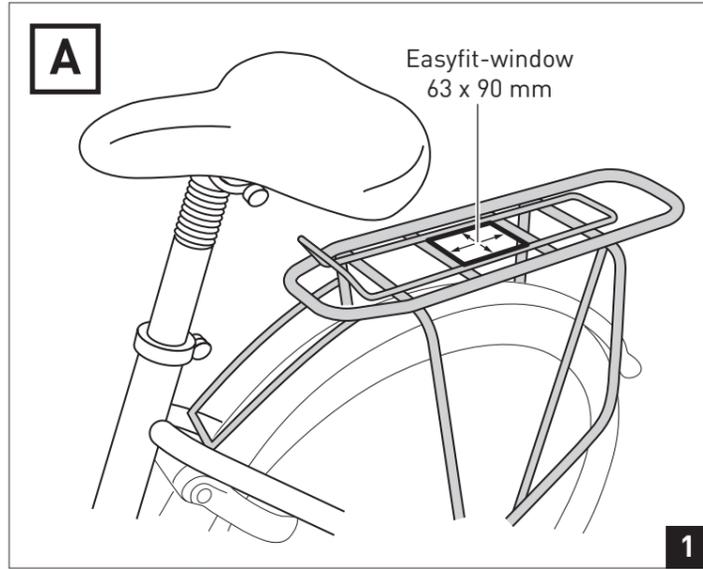

**A** OF / OR / OU / ODER **B**

