User's manual

Rear Freehub (for Disc Brake)



User's manuals in other languages are available at : http://si.shimano.com

IMPORTANT NOTICE

- Contact the place of purchase or a bicycle dealer for information on installation and adjustment of the products which are not found in the user's manual. A dealer's manual for professional and experienced bicycle mechanics is available on our website (http://si.shimano.com).
- Do not disassemble or alter this product.

For safety, be sure to read this user's manual thoroughly before use, and follow them for correct use.

Important Safety Information


Guidelines that require replacement, contact the place of purchase or a bicycle dealer.

WARNING

- Check that the wheels are fastened securely before riding the bicycle. If the wheels are loose in any way, they may come off the bicycle and serious injury may result.
- If the quick release lever is on the same side as the disc brake rotor, there is the danger that it may interfere with the disc brake rotor. Make sure that even if the quick release lever is tightened with your palm with all your strength, the quick release lever does not interfere with the disc brake rotor. If the lever interferes with the disc brake rotor, stop using the wheel and consult a dealer or an agency.
- Quick release lever Disc brake rotor
- After reading the user's manual carefully, keep it in a safe place for later reference.

Note

- Do not apply any lubricant to the inside of the hub, otherwise the grease will come out.
- If the quick release lever can be easily pushed to the CLOSE position, this means the clamping strength is insufficient. Return the quick release lever to the position perpendicular to the bicycle frame and again turn the adjusting nut clockwise to increase the clamping strength. Push the quick release lever back to the CLOSE position.

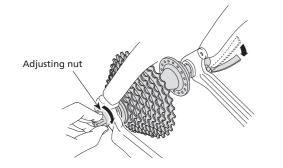

• If the clamping strength is adjusted too strong and the quick release lever cannot be pushed to the CLOSE position, turn the adjusting nut in a counter-clockwise direction to reduce the clamping strength. When doing this, do not fully release the adjuster nut. Turn it 1/8 of a revolution, and then try to push the lever to CLOSE, to set the maximum clamping strength with which you can push the quick release lever to the CLOSE position.




- Products are not guaranteed against natural wear and deterioration from normal use and aging.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.

Regular inspections before riding the bicycle

Before riding the bicycle, check the following items. If any problems are found with the following items, contact the place of purchase or a bicycle dealer.

- Are the wheels fixed?
- Do the wheels rotate smoothly?
- Are there any abnormal noises?

Names of parts

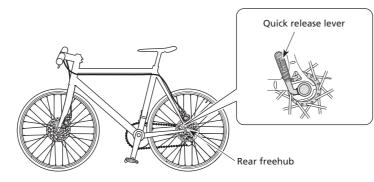


What is a Quick Release?


It is a mechanism that uses a single quick release lever operation on the hub to enable the wheel to be easily installed and removed.

Quick Release function

When the quick release lever is brought to the closed position, the lever nut moves inward. The force of this clamps the wheel to the frame and holds the wheel securely in place.

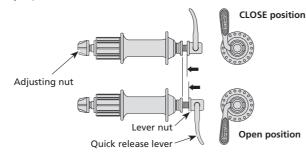

The clamping strength is adjusted by turning the adjusting nut. When the nut is turned in a clockwise direction, the clamping strength increases, and when the nut is turned in a counter-clockwise direction, the clamping strength decreases.

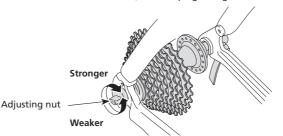

Cannot use fork thicknesses less than 6 mm.

Suitable dimensions of the rear end


Be sure to use only rear end widths with suitable dimensions.




Operation


How to fasten this quick release hub

1. Move the quick release lever to the OPEN position and set the wheel so it firmly touches the interior of the rear end (See sketch below).

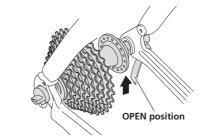


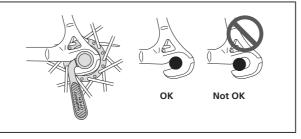

2. Open and close the quick release lever with your right hand while gradually tightening the adjusting nut with your left hand in the clockwise direction. Continue tightening the nut until you feel resistance with your hand at the point when the lever is parallel to the hub (as indicated by the dotted position in the diagram on the right).

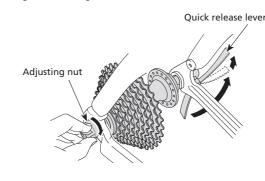

3. Grip the rear end with your fingers and use the palm of your hand to close the quick release lever with as much strength as possible. When closed, the quick release lever must be in the "CLOSE" position shown below in the diagram on the right. The side of the lever with the inscription "CLOSE" must be facing away from the bicycle, and the lever should be parallel to the rear end as shown below in the diagram on the left.

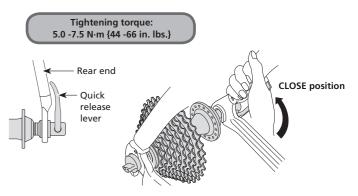

- Never fasten a wheel to a frame by rotating the quick release lever as shown in the diagram on the right.
- Simply rotating the lever in a circular motion will not fasten the wheel to the frame.
- Detachment of the wheel as a result of improper hub installation can result in serious bodily injury.




Positioning of the quick release lever

For safety, the quick release lever should be along the bicycle frame when in the CLOSE position.



Removing the wheel

Move the quick release lever from the CLOSE position to the OPEN position. And then remove the wheel.

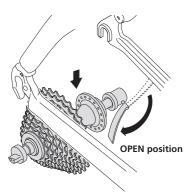

SHIMANO

SHIMANO AMERICAN CORPORATION One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003 SHIMANO EUROPE B.V.

weg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222

SHIMANO INC. 3-77 Oimatsu-cho, Sakai-ku, Sakai-shi, Osaka 590-8577, Japar

Please note: specifications are subject to change for improvement without notice. (English) © Jun. 2013 by Shimano Inc. HTR