

## Installation instructions for the Yepp® Easyfit XL carrier

### Installation instructions for the Yepp® Easyfit XL carrier:


The Yepp Easyfit XL carrier is suitable for fitting to standard bicycle luggage carriers with a load capacity of at least 78 lbs. The Yepp Easyfit XL carrier has a special installation frame for the Yepp Easyfit and the Yepp Junior rear seats. The maximum width of the carrier is 6.75 inches. The Yepp Easyfit carrier XL is **NOT** suitable for the Yepp Junior and the Junior Classic 911.

### Installing the Yepp Easyfit XL Carrier:

Position the Yepp Easyfit XL carrier on the luggage carrier and insert the 4 bolts from above into the four large slots. See the picture below for the proper positioning (**pic.1**).

Insert the bolts into the 4 clamps positioned under the Yepp Easyfit XL carrier. Note the proper position of the clamps (**pic.2**).

Position the Yepp Easyfit XL carrier exactly on your luggage carrier and tighten the bolts firmly.

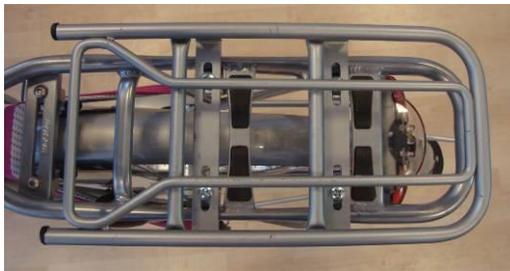

Pic. 1



Pic. 2

### Warnings and Safety advices:

**WARNING:** Check the bolts frequently and tighten them again if necessary.

- The Yepp Maxi Easyfit can be quickly and simply fitted after the installation.
- The position of the child seat depends on the type and size of the cycle.

**WARNING:** The centre of gravity of the Yepp Maxi Easyfit model child seat must never be further than 10 cm / 3.75 inches behind the rear axle (see the user instructions for the Yepp Maxi Easyfit).

**WARNING:** The Yepp Easyfit XL carrier can only be installed on luggage carriers with a load capacity of at least 60 lbs.

- If you are installing a Yepp Maxi Easyfit model child seat, please check whether the bicycle could tip over backwards when the child is in the seat. If so, move the Yepp Easyfit XL carrier forwards.
- Check frequently to ensure that all fittings are sufficiently tight.
- Use the Yepp Easyfit XL carrier only on a bicycle that is in good working order, of a type suitable for carrying the additional load, and of proper size and adjustment for the rider.
- Check the owner's manual that accompanied the bicycle or contact the bicycle manufacturer or distributor to obtain this information.
- The Yepp Easyfit XL carrier must not be used on motorised vehicles (including mopeds, scooters, etc.) apart from E-bikes.
- Never modify the carrier in any way.
- Do not use the carrier if any part of it appears damaged.

### RECOMMENDATION:

- Use a good two-legged bicycle stand.

### Guarantee:

GMG guarantees that this product has been manufactured according to the latest European safety standards and quality requirements for this product and that this product at the time of purchasing

